



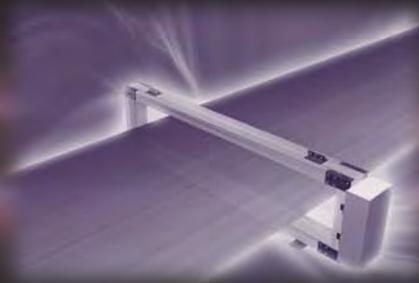
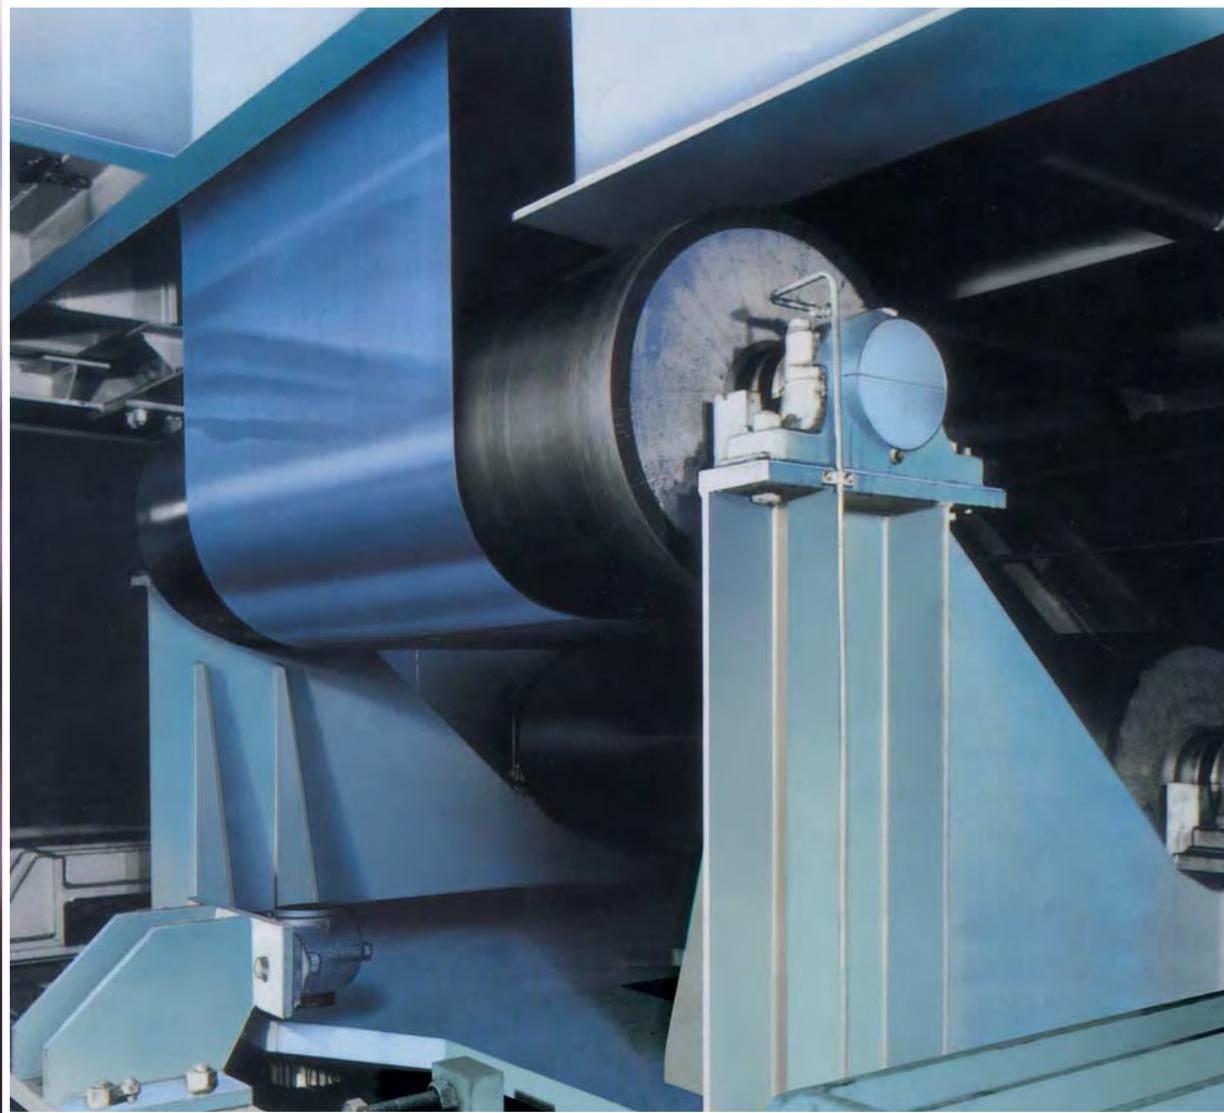
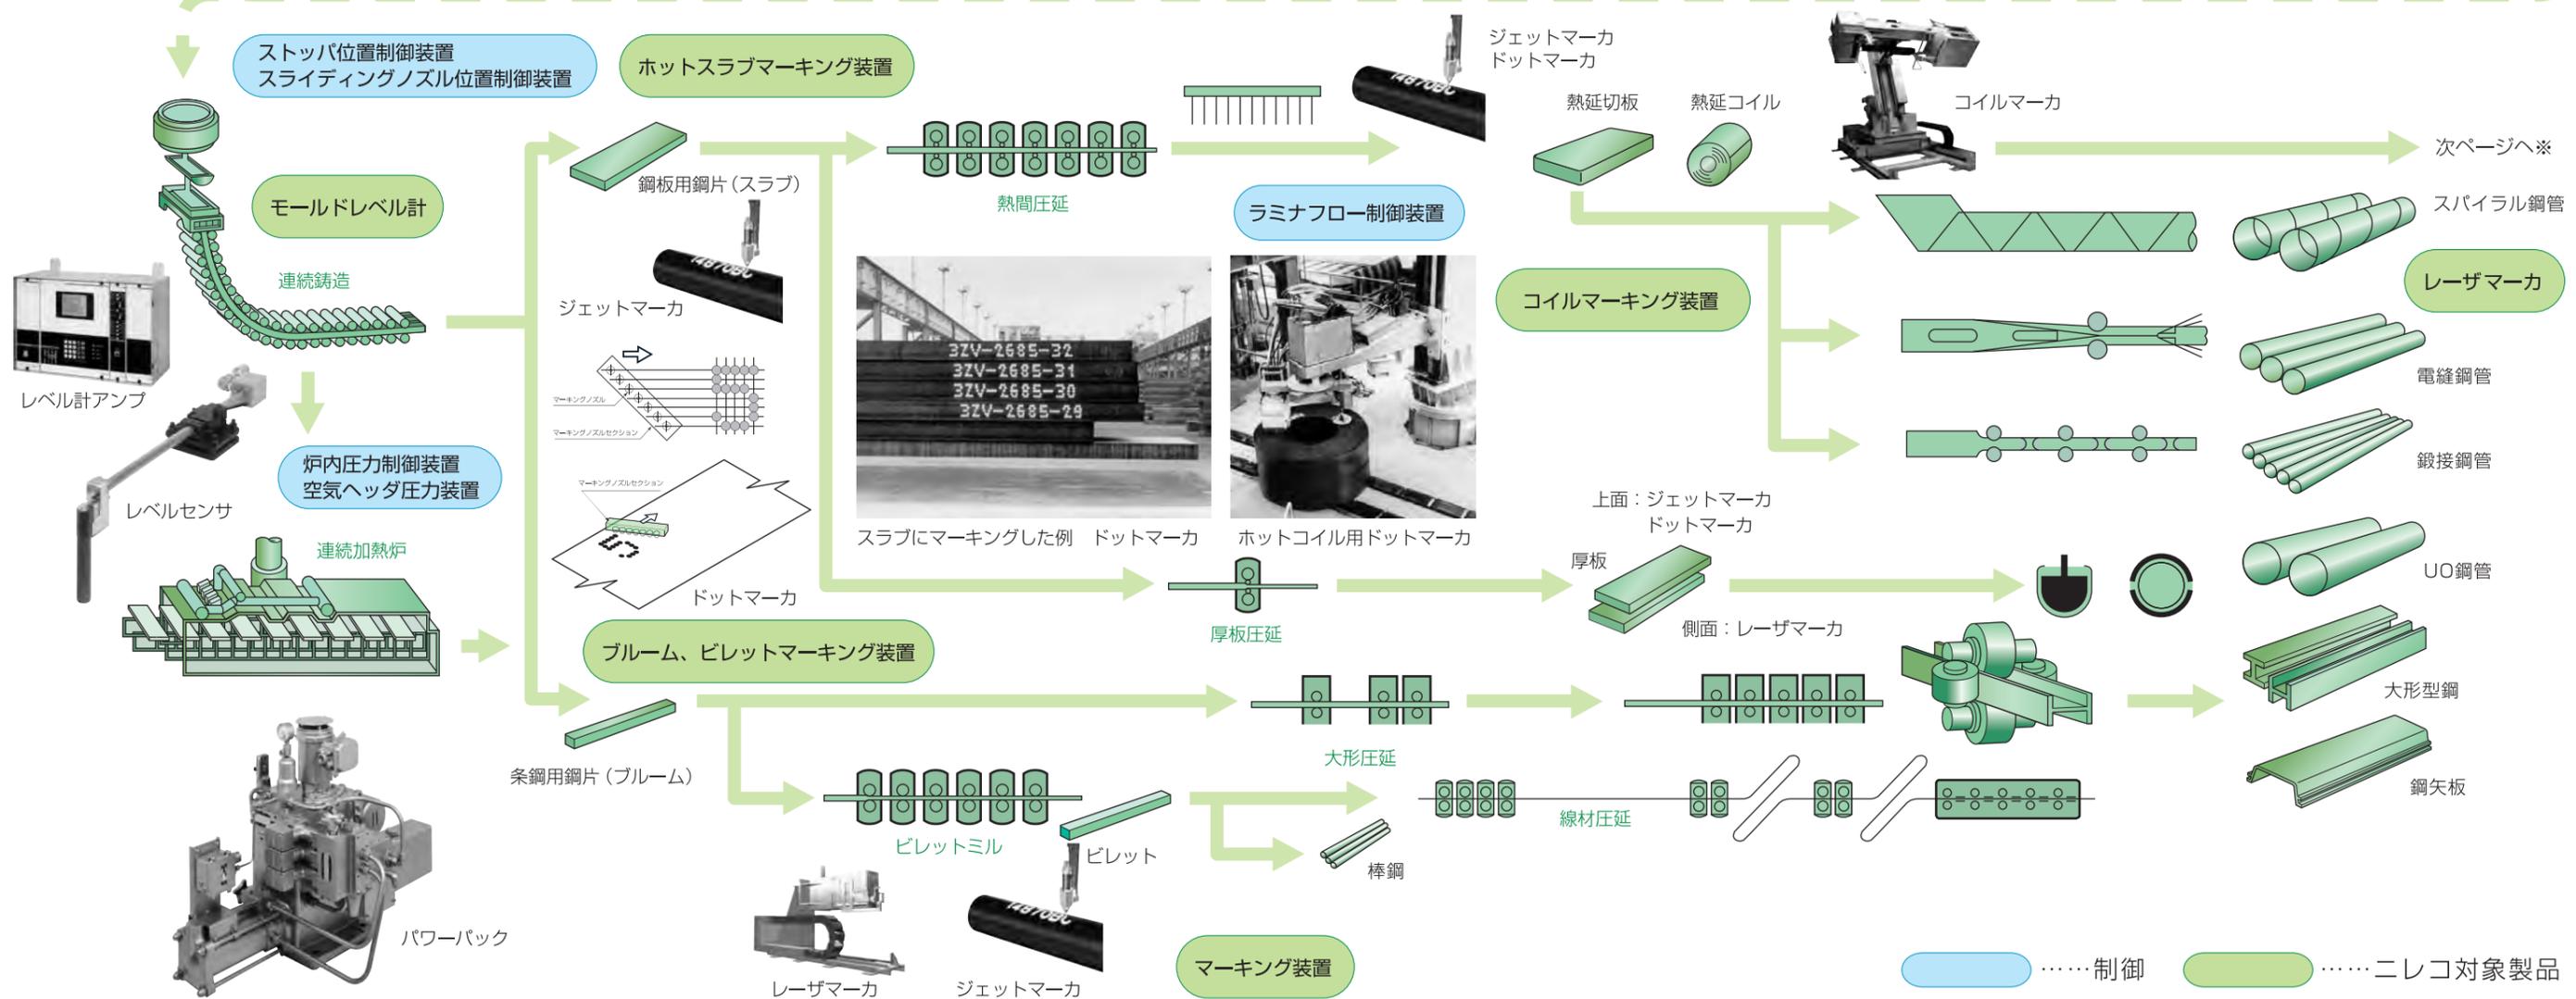


# 鉄鋼プロセスにおけるニレコの 計測・制御装置

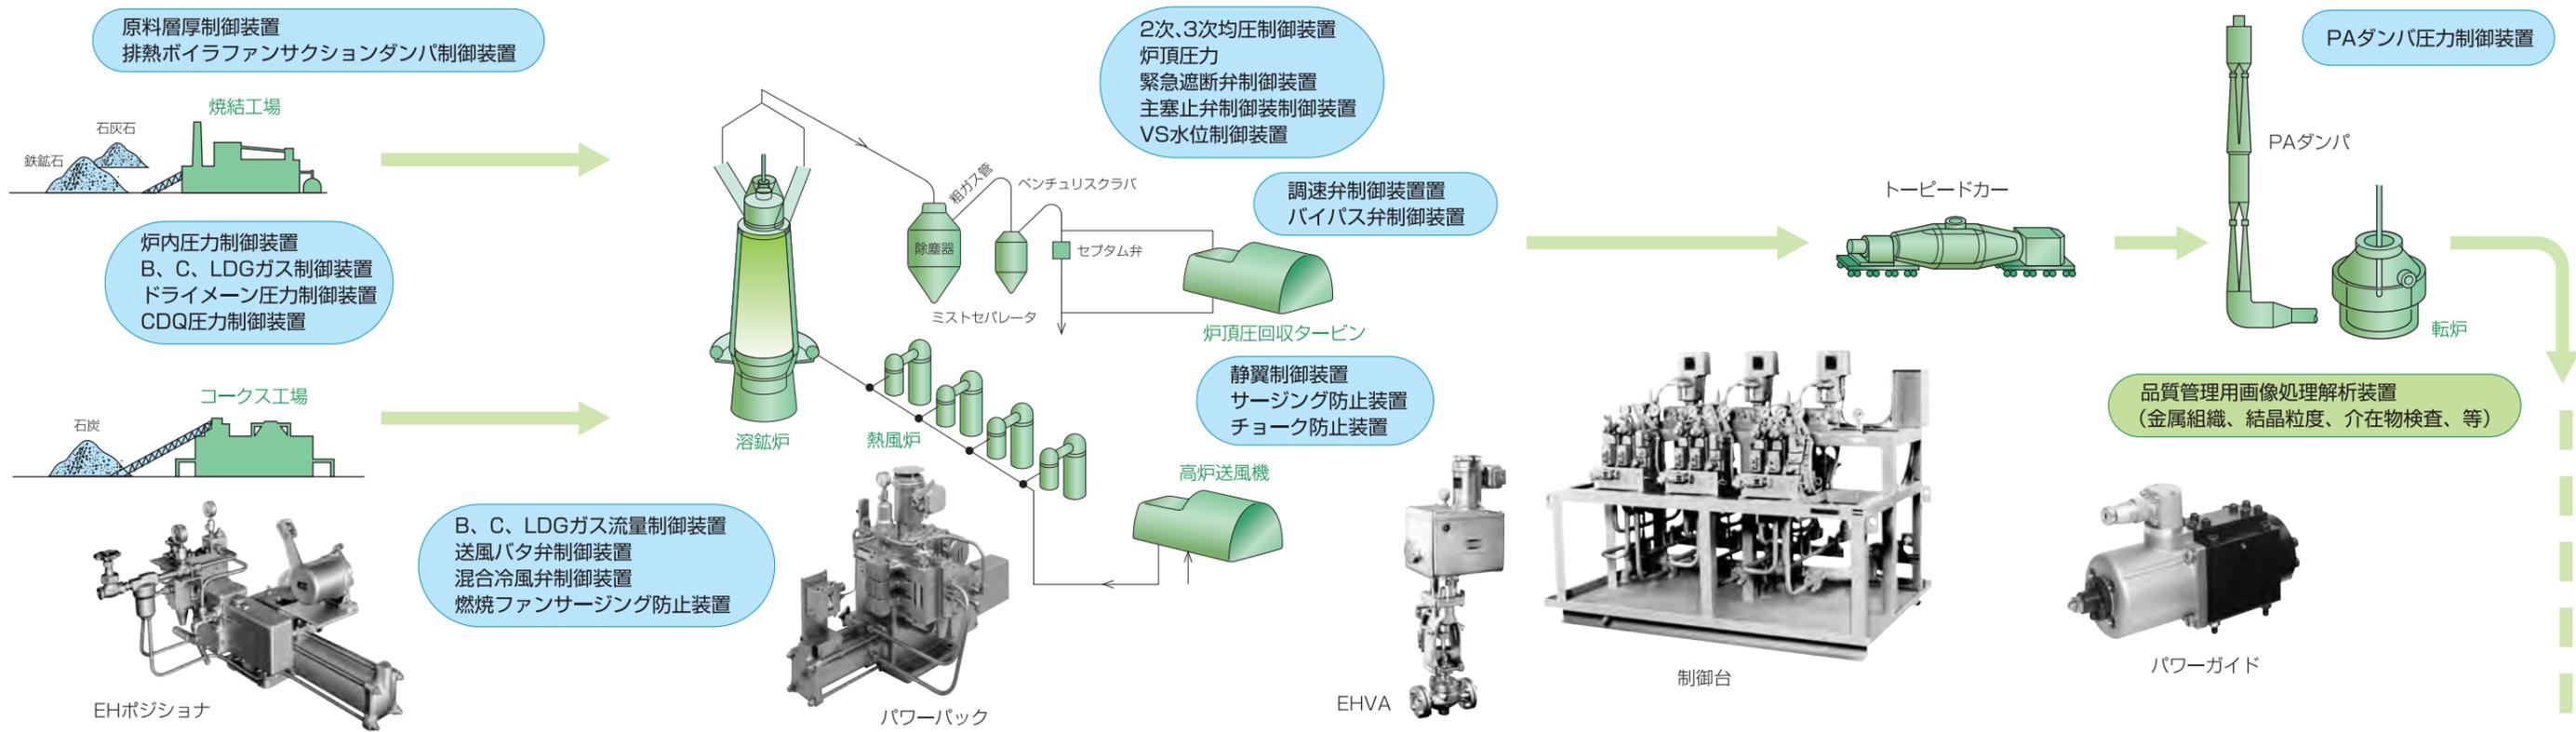

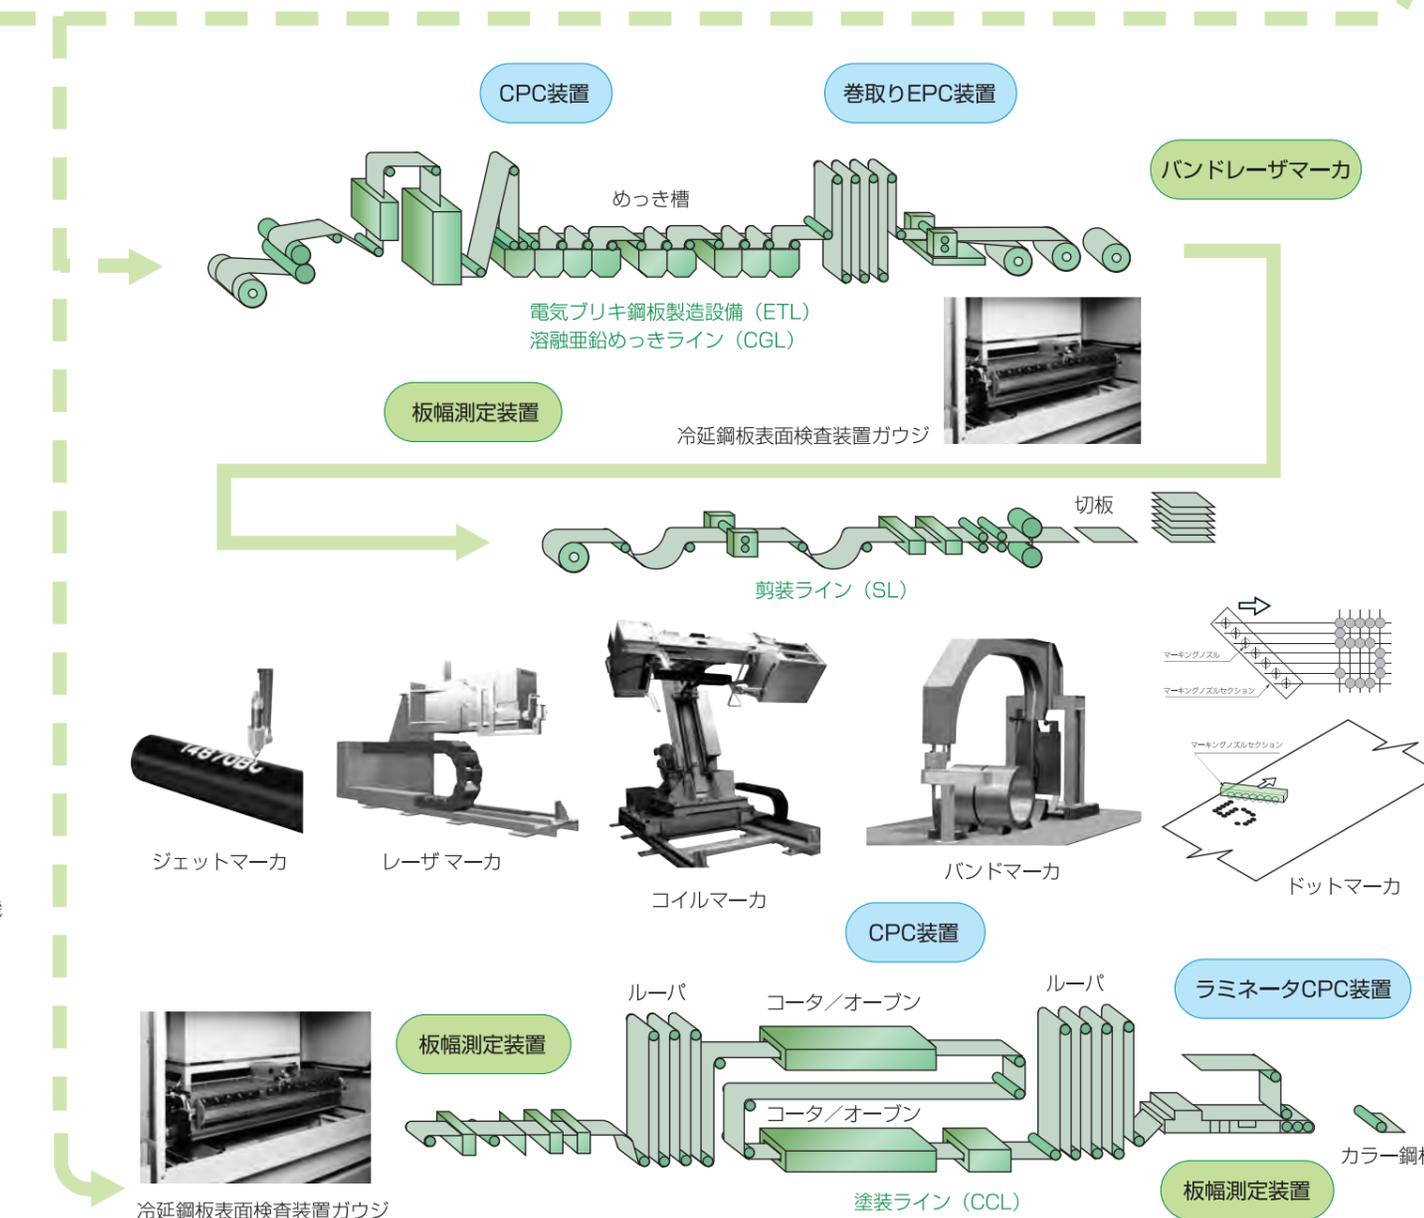

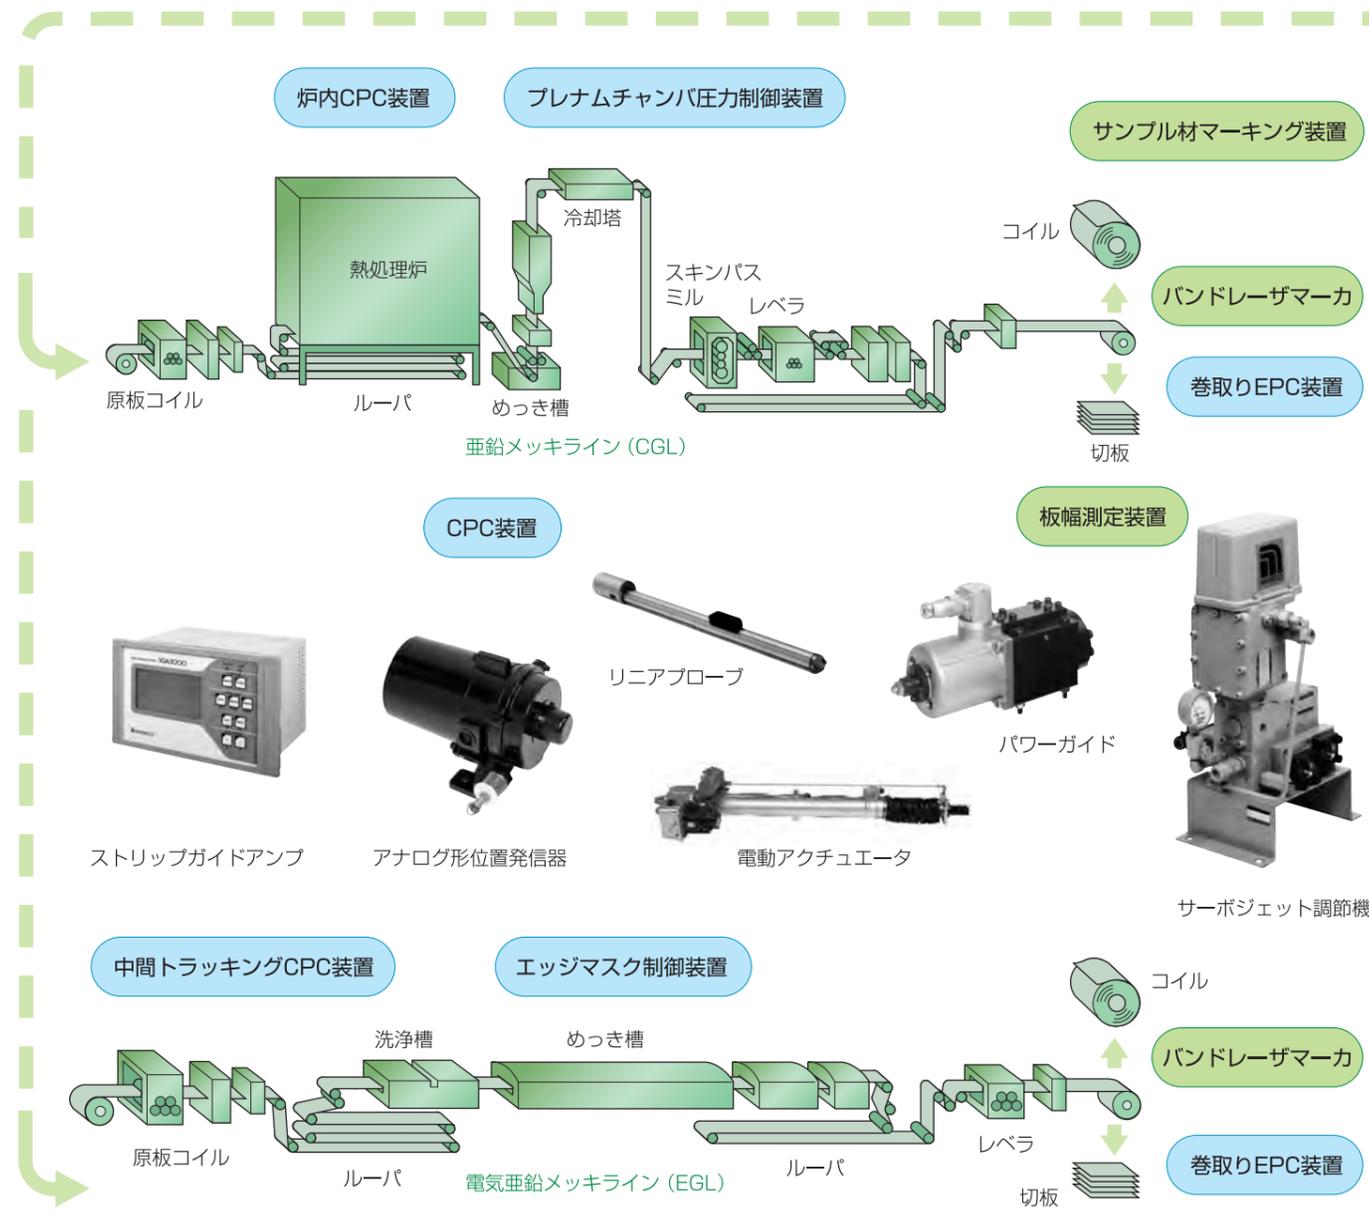

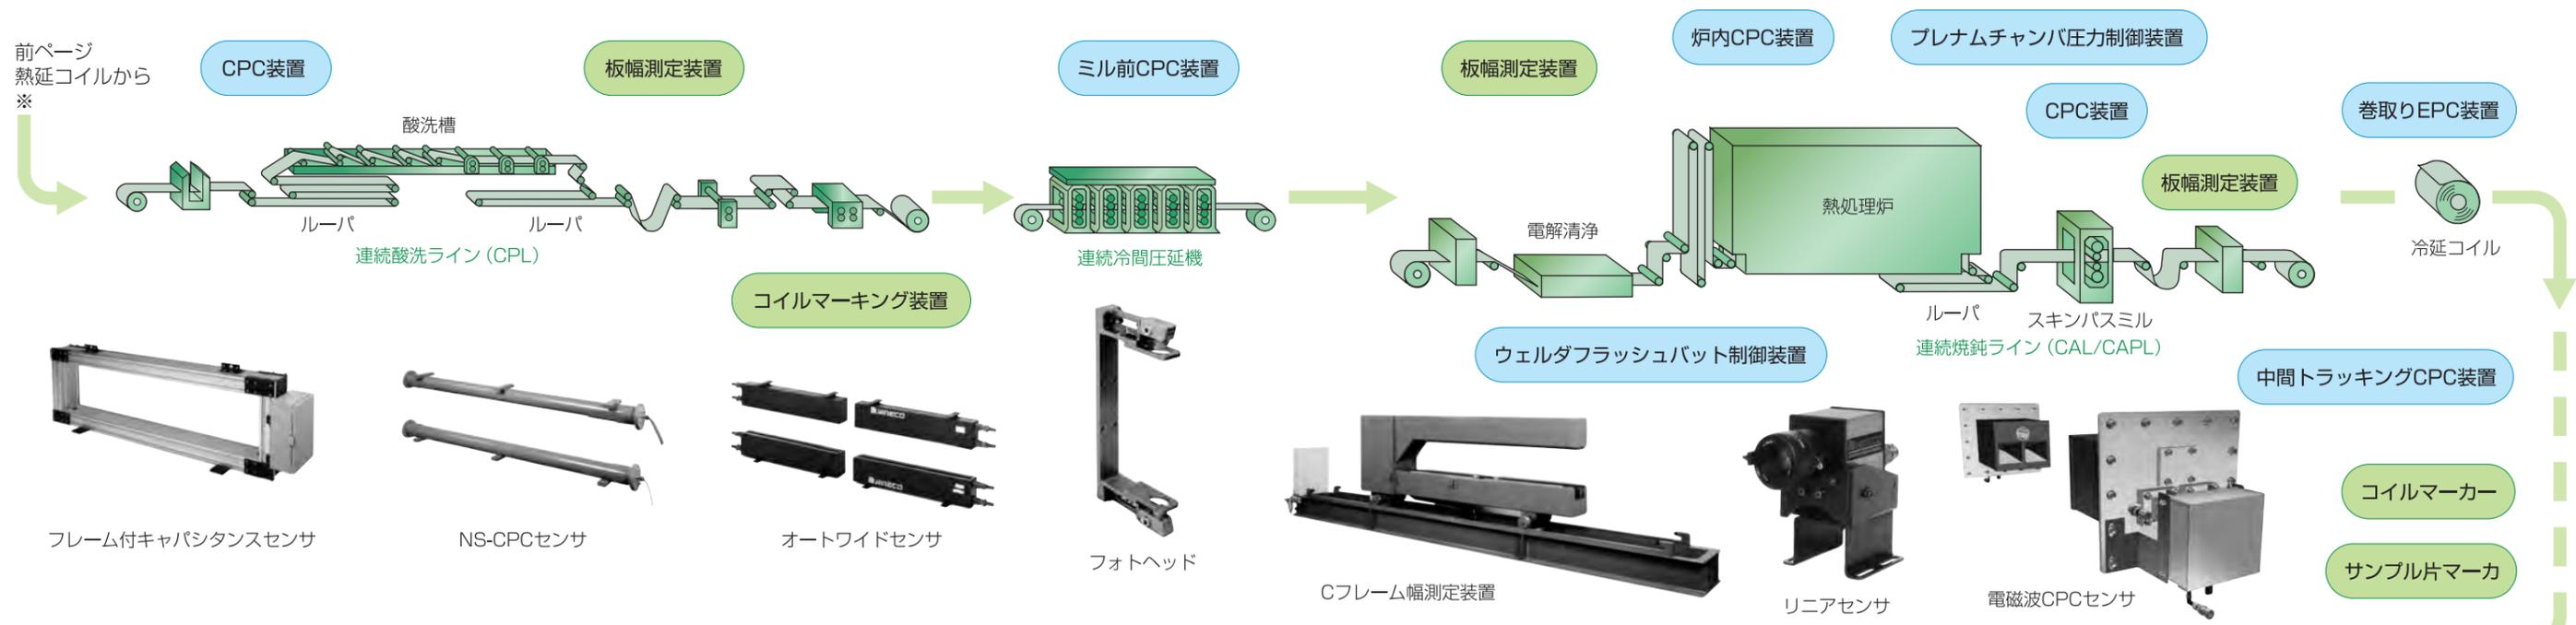

## 株式会社ニレコ

京橋事業所 〒104-0031 東京都中央区京橋1-6-13 (アサコ京橋ビル)

☎ (03) 3562-2201 FAX (03) 3564-4316

大阪営業所 〒542-0081 大阪市中央区南船場4-8-6 (測上ビル)

☎ (06) 243-2461 FAX (06) 243-2466

九州出張所 〒802-0001 北九州市小倉北区浅野1-2-39 (勤和興産浅野ビル)

☎ (093) 551-5710 FAX (093) 551-5701

八王子事業所 〒192-8522 東京都八王子市石川町2951-4

☎ (0426) 42-3111 FAX (0426) 45-7737